

Setup Essentials

LG ARENA™

- Mobile Email
- Text Messaging
- AT&T Mobile TV
- AT&T Music
- Take and Send a Picture
- Instant Messaging
- Multitasking
- Video Share™
- Touch Screen/Navigation
- Mobile Web
- Downloadable Fun
- AT&T Navigator
- AT&T Social Net



MOBILE EMAIL

1. From the home screen, tap > **Mobile Email**.
2. Tap the name of your email provider. The steps that follow will vary depending on your provider.
3. You may be asked to accept terms of service and/or to select your email domain. Follow the on-screen instructions.
4. Enter your email address and password. Tap each field, enter the information with the virtual keypad, and tap **Save**.
5. Tap **Sign In**.

TEXT MESSAGING

1. From the home screen, tap .
2. Tap **Create New Message** and rotate the phone to display the full virtual keyboard.
3. Enter your message and tap **Send To**.
4. Turn the phone upright. Select contacts by tapping the checkbox by their names. To enter a number or email address or to adjust other options, tap . When you are ready, tap **Send**.

Insert a Picture

1. Once you have created a message, tap > **Insert**.
2. Tap **Picture**, and then turn the phone upright. Tap **Insert** beside the thumbnail of the picture you would like to attach.
3. Tap **Send To** and follow the instructions from Step 4 above.

AT&T MOBILE TV

1. From the home screen, tap > **TV**.
2. Watch the introductory video clip. (Plays the first time you access Mobile TV only.)
3. Tap the **Subscribe Now** option.
4. Review the package information and tap **Continue**.
5. If you agree to the terms and conditions, tap **Agree**.
6. To confirm your subscription, tap **Submit**.
7. The Media Player will launch. Tap **Program Guide** to change the channels.

AT&T MUSIC

1. From the home screen and with the phone unlocked, tap > **AT&T Music**.
1. Listen to your music with the integrated **Music Player**. Access your music by artist, album, genre, or playlist.
2. Browse and select music from digital music stores, such as Napster Mobile® and eMusic Mobile®, with **Shop Music**.
3. Instantly find out the artist's name and the title of a song with **MusicID 2**.
4. Get unlimited access to commercial-free music and the latest hip-hop, R&B, rock, jazz, and country anywhere you go with **XM Radio**.
5. Access music videos from the latest artists with **Music Videos**.
6. Sync your phone with the music collection on your PC with **Music Sync**.
7. Visit one or more hot user communities by going to **Community**. Interact with friends and the community as well as review artist fan sites.
8. Purchase additional fun music applications by going to **Music Apps**.

TAKE AND SEND A PICTURE

Take a Picture

1. From the home screen, turn the phone horizontally and press the **Key**.
2. Tap the screen to customize the image settings. When ready, tap **OK**.
3. Press the **Key** to take a picture.

Send a Picture via Text Message

1. Once you have taken a picture, tap to compose a text message.
2. Enter your message with the virtual keyboard and tap **Send To**.
3. Turn the phone upright. Select contacts by tapping the checkbox by their names. To enter a number or email address or to adjust other options, tap . When you are ready, tap **Send**.

Note: Photos will be saved to My Stuff > Pictures, accessible from the Main Menu.

INSTANT MESSAGING

1. From the home screen, tap > **IM**.
2. Tap the name of your instant messaging provider, and then tap **Sign In**. The remaining steps will vary slightly for each provider.
3. Enter your email address and password by tapping each field and entering the information with the virtual keypad. When ready, tap **Sign In**.
4. Tap **Online**, **Other Contacts**, or **Friends** to see a list of contacts.
5. Tap the name of an online contact, and then tap the message field.
6. Rotate the phone to display the full virtual keyboard, and enter your message. To add an emoticon, tap the **Smiley Face icon**.
7. When ready, tap **Send IM**.

MULTITASKING

1. While using one application, press the **Key**.
2. The Task Menu will display currently open applications as well as links to the Main Menu and the home screen. Tap the application you wish to switch to, or tap and tap a new application.
3. To close an application from the Task Menu, tap the **X icon** beside its name.

Note: Music and voice applications cannot be used at the same time.

VIDEO SHARE™

Making a Video Share Call

1. From the home screen, tap and dial the 10-digit number of another 3G Video Share capable device.*
2. Once the call is answered, tap the **Video Share icon** when it appears.
3. You may share live or recorded video. Tap **Live**.

Accepting a Video Share Call

1. When a caller initiates Video Share, their name or number will appear in an invitation on your screen.
2. Tap **Yes** to accept, and the Video Share session will begin automatically.

To end a Video Share session, tap **Stop**.

*Video Share is not available in all markets. Both parties must be in a 3G service area—a 3G icon must appear by the signal bars prior to a call being placed, and both parties must remain in the 3G coverage area for the duration of the Video Share session.

DOWNLOADABLE FUN

Access AppCenter

1. From the home screen, tap > **AppCenter**.
2. Once connected, select the category you want to view to browse content. Follow instructions to purchase the desired item.

Access Applications

1. From the home screen, tap .
2. Many useful applications can be accessed from the Main Menu, including
 - **Where®** – Find local information, maps, and directions.
 - **Wikimobile** – Access all 2 million Wikipedia articles.
 - **YPmobile** – Find local businesses and get directions.
3. Tap **Applications** to find additional applications and to shop for new ones.

Note: Select applications may require a subscription.

AT&T NAVIGATOR

To Start AT&T Navigator

1. From the home screen, tap > **AT&T Navigator**.
2. Scroll down and tap **Yes** to accept the terms and conditions. Tap **Login**, read the warning, and tap **Agree** to continue. You may then choose to view a tour of the AT&T Navigator features.

Navigator Options

- **Drive To** – Select your destination.
- **Search** – Find your favorite location.
- **Maps & Traffic** – Get the latest local traffic and map information.
- **Tools & Extras** – Learn more about Navigator and set your profile preferences.

For more information, visit att.com/navigator.

TOUCH SCREEN/NAVIGATION

- To select an item, tap it.
- To scroll through lists, touch an item and slide your finger up the screen until more items are visible.
- To scroll through submenus on the Main Menu screen, touch an item and slide your finger left or right across the screen until more items are visible.

Customize the Home Screen

1. From the home screen, tap .
2. Scroll left or right through the icons. Touch the icon you want and drag it onto the home screen.
3. To remove a widget from the home screen, touch and drag it back into the widget menu.
4. Tap to close the widget menu.

Note: The touch screen automatically locks when the phone is left inactive. To unlock the touch screen, quickly press the **Power Key** or press any side key and then touch and hold the **Unlock icon**.

MOBILE WEB

1. From the home screen, tap > **Mobile Web**.
2. To visit a particular website, tap the address bar at the top of the screen, rotate the phone to display the full virtual keyboard, enter the web address, and tap **Go**.
3. Tap the **Bookmarks icon** to access your list of favorite sites. To add a site to the list, tap > **New Bookmark**, enter the title and URL, and tap **Save**.

Personalize Your MEdia Net Home Page

1. On the MEdia Net home page, scroll to the bottom and tap **Customize MEdia Net**.
2. Tap **Edit Categories**.
3. Tap the categories you would like to have appear on your MEdia Net home page, and then tap **Save**.



AT&T SOCIAL NET

1. From the home screen, tap . In the **Communication** submenu, scroll right and tap **AT&T Social Net**.
2. To accept data charges if asked, tap **Continue**. To accept the End User License Agreement, tap **Accept**.
3. Enter your phone number and, if you choose, your email address. Tap each field, enter the information with the virtual keypad, and tap **Save**. When you are ready, tap **Done**.

Access Social Networks and Information

- Tap , , or to quickly update your status.
- Tap for the latest news and information.
- Tap for a snapshot of all your status updates.

SPECIFICATIONS

Frequency: GSM/GPRS/EDGE: 850/900/1800/1900 MHz (Quad-Band)
 UMTS/HSDPA: 850/1900 MHz
 Data Transmission: GPRS/EDGE/UMTS/HSDPA 3.6Mbps
 Internal Memory: 150MB
 Dimensions: 4.24" (H) x 2.17" (W) x 0.58" (D)
 Weight: 3.25 oz.

