

Canon

DISCOVERY DAY



AUTUMN 2013


Basic Control Layout

Variance Amongst Models

Although the basic parts of the camera are very similar, they may have a slightly different appearance or location on your particular model. It is important to check your camera's manual for accurate and detailed information.

Diagram: EOS 50D

Front of Camera

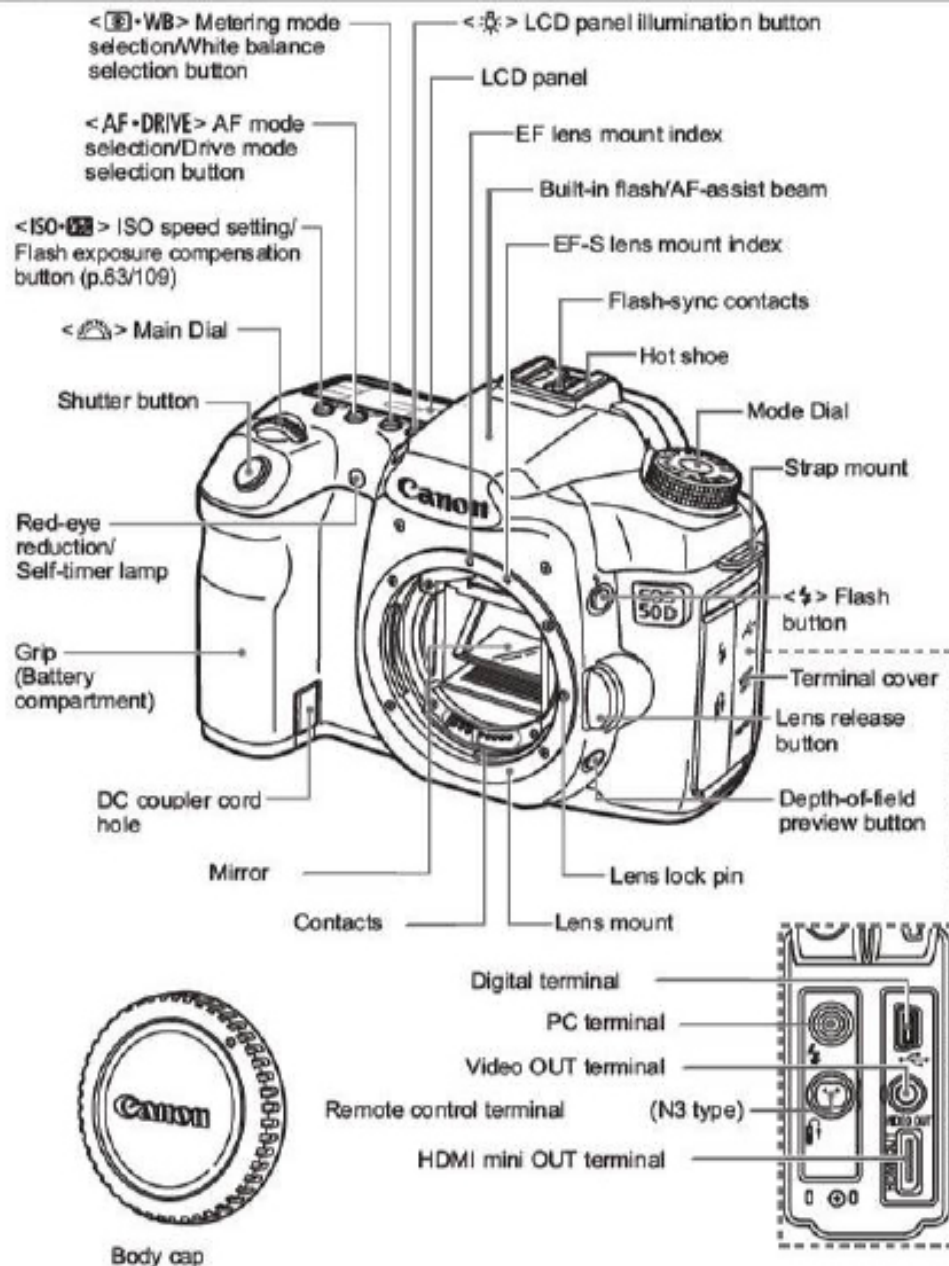

MODE DIAL

The mode dial is located at the top of the camera and allows you to select various shooting modes. The shooting modes are divided into two zones: basic and creative.

The EOS 60D and similar models have one or more additional custom modes that allow you to memorize various settings for instant recall (“C” settings on the Mode Dial).

Viewfinder

The viewfinder allows real-time viewing of the subject through the lens.

EOS 60D



Rebel Series



In addition to seeing the subject, you will also see:

- Nine (9) auto focus points, with most EOS camera models
- Note: EOS Rebel XT and XT_i — 7 points; EOS 6D — 11 points;
- EOS 7D has 19 focusing points, and EOS 5D Mark III has 61
- Shooting information that includes:
 - Exposure lock — whether it is activated or not (* icon)
 - Shutter speed
 - Aperture
 - Exposure compensation scale
 - Number of shots remaining if you shoot a continuous burst
 - AF confirm (whether focus has been achieved with one of the focus points.)

